



CTD Data RV Heincke HE526

Data Processing Report

Contents

1	Introduction	1
2	Workflow	1
3	Cruise details	3
4	Sensor Layout	3
5	Processing	3
6	Results	5

Contact:

Gerd Rohardt

Alfred-Wegener-Institute

Am Handelshafen 12, D-27570 Bremerhaven, GERMANY

Mail: info@awi.de

Processing Agency:

FIELAX GmbH

Schleusenstr. 14, D-27568 Bremerhaven, GERMANY

Mail: info@fielax.de

Ref.: CTD-HE526-report.pdf	Vers.: 1	Date: 2019/04/17	Status: final	l
----------------------------	----------	------------------	---------------	---



1 Introduction

This report describes the processing of CTD raw data acquired by Seabird SBE 911plus CTD on board RV Heincke during expedition HE526.

2 Workflow

The different steps of processing and validation are visualized in Figure 1. The CTD raw data are delivered from Andreas Wisotzki (AWI). The station book of the RV Heincke cruise is extracted from the DAVIS SHIP data base (https://dship.awi.de). The first CTD station and cast is processed manually in SBE Data Processing to configure the *.psa Seabird routines Data Conversion, Wild Edit, Bottle Summary, Split, Translate, Cell Thermal Mass, Loop Edit and Bin Average. The Seabird routines are then run in a batch job CTDjob in ManageCTD to process the complete CTD data set. The downcast of each CTD station/cast is used for further processing. In CTDjob the start record and the lowest altimeter point of the downcast is selected. From the downcast data figures to compare both oxygen sensors are generated. The oxygen sensor choice and the offset between the two oxygen sensors is documented in the processing summary table. With the *Utilities* → *Dship* Ebook function of ManageCTD the DAVIS SHIP station book extraction is used for getting the header information of all CTD stations/casts of the cruise. ManageCTD *Utilities* \rightarrow *Find Profile* function compares station times of the header with the entries in the station book to find out the correct naming of the stations and casts. In CTDheader in ManageCTD the header information of each CTD station/cast is displayed, controlled and corrected if necessary. CTDdespike in ManageCTD is used for a visual check of the data and to erase/interpolate spikes in the data if necessary. Additionally, a sensor pair (Temp1/Sal1 or Temp2/Sal2) is chosen for each station/cast of the RV Heincke cruise in CTDdespike.

ManageCTD *Utilities* \rightarrow *CheckDoubleSensors* controls the quality of temperature and conductivity sensors. For this purpose outliers of too high sensor pair differences could be removed. The data is then converted to spreadsheet format with dsp2odv for visualization of the data in Ocean Data View (ODV). The second visual inspection of the CTD data allows a comparison with data from other CTD casts from close-by stations to verify the oxygen sensor data. Therefore, potential reference cruise data is downloaded from PANGAEA (http://www.PANGAEA.de). The reference data is converted to *.mat format. In the ManageCTD Final Processing the CTD data is displayed together with the reference data. Bad data points, sensors or casts are interpolated or erased from the data set and filters are applied if necessary. The processed CTD data are written to text files and imported to PANGAEA (http://www.PANGAEA.de) for publication.



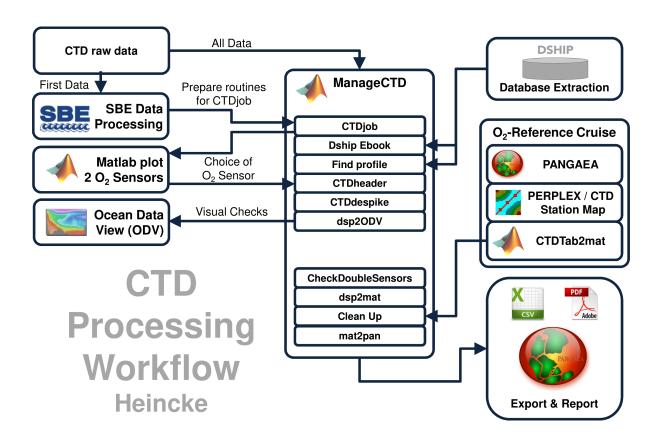


Figure 1: CTD data Processing Workflow



3 Cruise details

Vessel name RV Heincke

Cruise name HE526

Cruise start 12.03.2019 Bremerhaven
Cruise end 16.03.2019 Bremerhaven

Cruise duration 5 days
No. of CTD casts 19

4 Sensor Layout

This chapter describes the CTD sensors mounted during this cruise: SBE 911plus CTD (SN: 1015), SBE Instrument Configuration Version 7.23.0.1.

ID	Sensor Name	Serial No.	Calibration Date
55	TemperatureSensor	5354	30-Nov-18
3	ConductivitySensor	2470	04-Dec-18
45	PressureSensor	1015	26-Jan-17
55	TemperatureSensor	5375	30-Nov-18
3	ConductivitySensor	3573	04-Dec-18
0	AltimeterSensor	46466	23-Mar-09
71	WET_LabsCStar	1348DR	28-Jan-2016
20	FluoroWetlabECO_AFL_FL_Sensor	1365	15-Jan-2016
38	OxygenSensor	2292	28-Dec-18
38	OxygenSensor	3654	28-Dec-18

5 Processing

Details of processing procedures and processing parameters are described in *CTD Processing Log-book of RV Heincke* (hdl: 10013/epic.47427).

Density Inversions and Manual Validation

Obvious outliers were removed manually. For the visual check density inversions > 0.005 kg/m^3 and > 0.01 kg/m^3 were flagged differently for display but not removed automatically. Decisions whether the flagged values were manually removed or not are based on the description in *CTD Processing Logbook of RV Heincke* (hdl: 10013/epic.47427).



Sensor Differences

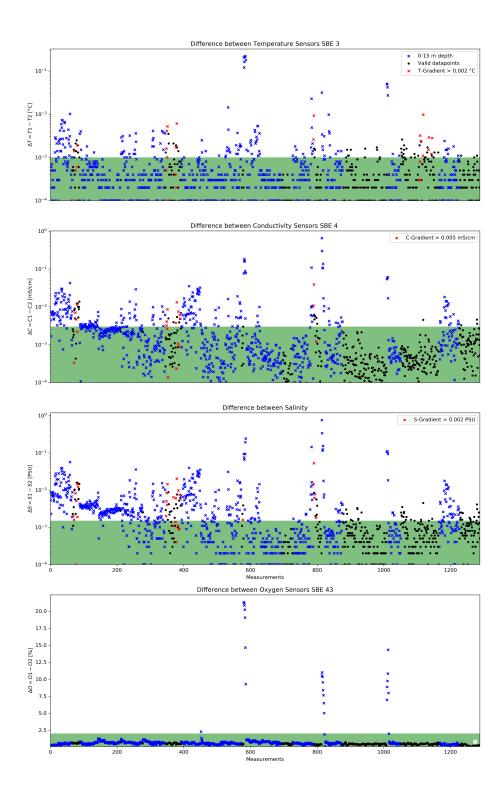


Figure 2: Data accuracy of sensor pairs HE526



6 Results

A complete processing overview for each sensor at each station is summarized in the table in the Appendix (Figure 3).

Double Sensor Check

In Figure 2, the absolute residuals between the sensorpairs are shown for the measured parameters *Temperature* and *Conductivity*, the derived parameter *Salinity* and the measured parameter *Oxygen*. Measurements in shallow water depths < 15 m (blue crosses) and gradients between two datapoints exceeding a defined threshold (red crosses) were omitted for accuracy calculation.

Parameter	Accuracy	Measurements	Remaining			
		removed	measurements			
	given by manufacturer	Surface 0-15m	within accuracy			
		+ gradient filter	specifications			
Temperature	±0.001 °C	68.09%	87.35%			
Conductivity	$\pm 0.003~mS/cm$	67.62%	94.24%			
Salinity	$\pm 0.0015~PSU$	68.48%	81.28%			
Oxygen	$\pm 2.0 \% \ of saturation$	65.92%	100.00%			

Comments

- 19 CTD/RO "on ground" entries in DShip station book
- 18 CTD raw data sets delivered
- 0 CTD cast was invalid or test
- 0 CTD casts were made twice on a station
- 0 CTD casts had a wrong filename
- 18 CTD casts processed and uploaded
- of these 18 processed CTD casts:
 - 0 oxygen profiles deleted (spiky and not matching to reference casts)
 - 70 data points interpolated
 - 47 data points erased



Result files

Text File (HE526_phys_oce.tab):

The format is a plain text (tab-delimited values) file.

Column separator	Tabulator "\t"								
Column 1	Event label								
Column 2	Date/Time of event								
Column 3	Latitude of event								
Column 4	Longitude of event								
Column 5	Elevation of event								
Column 6	DEPTH, water								
Column 7	Pressure, water								
Column 8	Temperature, water								
Column 9	Conductivity								
Column 10	Salinity								
Column 11	Temperature, water, potential								
Column 12	Density, sigma-theta (0)								
Column 13	Oxygen								
Column 14	Oxygen, saturation								
Column 15	Attenuation, optical beam transmission								
Column 16	Fluorometer								
Column 17	Number of observations								

Processing Report (CTD-HE526-report.pdf):

This PDF document.



Comments																				
) Offset	0.05	0.00	0.13	0.07	0.00	0.15	0.07	0.02	0.20	0.12	0.01	0.07	-	0.10	0.04	0.08	0.03	0.03	
Oxygen reference	dist. (km) Offset	0.26	7.21	7.45	8.29	1.64	0.34	0.54	0.37	15.46	1.24	0.39	16.7	5.3	1.95	0.39	2.66	1.76	1.71	
Охудеп	cruise/sss-cc	HE479/3-1	HE479/3-1	HE479/14-1	HE479/14-1	HE479/14-1	HE479/13-1	HE479/11-1	HE479/10-1	HE479/9-1	HE479/15-4	HE479/12-1	HE479/12-4	HE479/16-1	HE479/19-1	HE479/18-1	HE479/17-1	HE479/22-1	HE479/23-1	
ensors	Offset	0.03	0.04	0.05	0.05	0.04	0.04	0.02	0.04	0.24	0.04	0.03	90.0	90.0	0.02	0.01	0.02	0.02	0.03	
2 Oxy Sensors	Sensor	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	2532	
complete	erased									24			16	7						47
W CO	interp				10	2			2	2	2	2	2	10		2	15			70
Оху	erased									8			11	7						56
	interp				2	1			1	1	1	1	1	2		1	3			14
Fluor	erased																			0
	d interp				2	1			1	1	1	1	1	2		1	3			14
Trans	erased																			0
	d interp				2	1			1	1	1	1	1	2		1	3			14
Sal	p erased									8			3							11
	d interp				2	1			1	1	1	1	1	2		1	3			14
Тетр	rp erased									8			2							10
٠.	interp				2	1			1	1	1	1	1	2		1	3			14
Sensor		1	1	1	1	5 1	5 1	, 1	3 1	1	0	1	1	3 1	1	1	5 1	1 1	3 1	
File HE526		_001	_002	_003	_004	-005	900	_007	800	600	_010	_011	_012	_013	_014	_015	_016	_017	_018	
le Depth		17.4	10.6	14	2.9	4.3	11.1	10.8	14.2	10.4	20.9	19	40	36.3	25.9	31.7	38.3	22.4	27.2	
Position Longitud		008° 09.045' E	008° 06.451' E	007° 58.137' E	008° 03.778' E	008° 03.795' E	008° 13.876' E	008° 21.254' E	008° 09.913' E	008° 11.066' E	007° 49.649' E	008° 06.805' E	007° 53.258' E	007° 37.808' E	007° 05.125' E	007° 05.445' E	007° 29.695' E	007° 32.305' E	007° 48.050' E	
Position Latitude Position Longitude		53 °46.724' N	53 °50.168' N	53 °55.279' N	53 °53.280' N	53 °58.621' N	54 °02.654' N	54 °13.873' N	54 °22.205' N	54 °32.212' N	54 °18.507' N	54 °10.833' N	54 °06.165' N	54 °04.620' N	N ,56.765° 83	54° 10.599' N	54° 14.242' N	53° 53.715' N	53° 56.185' N	
Time		10:52:30	11:46:24	13:01:51	13:42:00	10:16:17	11:17:55	12:40:02	14:11:40	15:22:07	17:38:45	19:09:50	15:31:01)6:44:59)8:53:22	10:09:35	11:55:12)5:49:42	7:04:44	
Date		12.03.2019 10:52:30	12.03.2019 11:46:24	12.03.2019 13:01:51	12.03.2019 13:42:00	14.03.2019 10:16:17	14.03.2019 11:17:55	14.03.2019 12:40:02	14.03.2019 14:11:40	14.03.2019 15:22:07	14.03.2019 17:38:45	14.03.2019 19:09:50	15.03.2019 05:31:01	15.03.2019 06:44:59	15.03.2019 08:53:22	15.03.2019 10:09:35	15.03.2019 11:55:12	16.03.2019 05:49:42	16.03.2019 07:04:44	
Gear Abbr.		СТБ	CTD	CTD	СТБ															
Station HE526	1	1-1	2-1	3-1	4-1	5-1	6-1	7-1	8-1	9-1	10-1	11-1	12-1	13-1	14-1	15-1	16.1	17-1	18-1	

Figure 3: CTD data Processing Summary HE526 Page 7 of 8



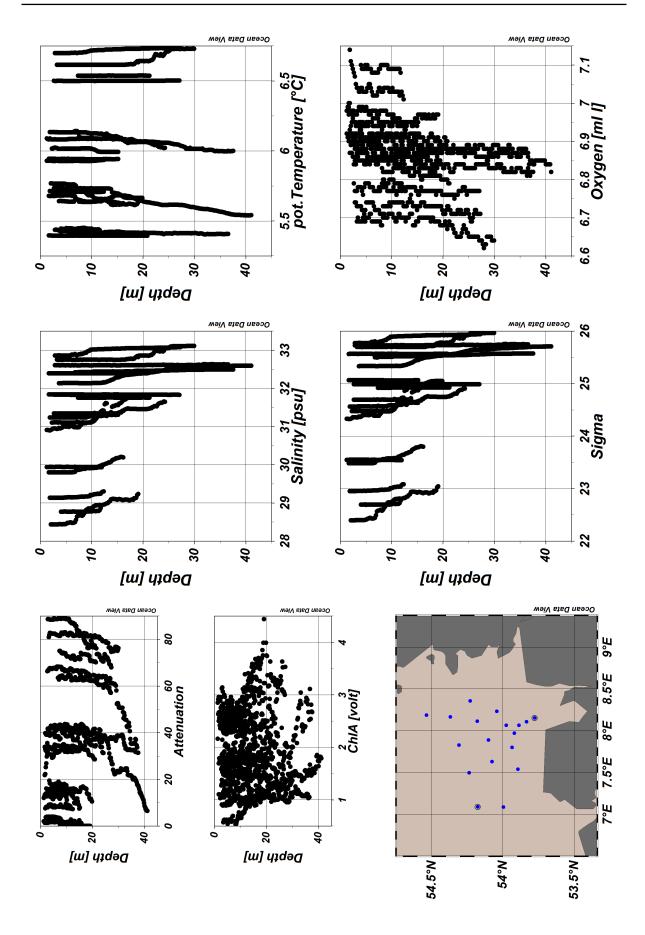


Figure 4: ODV Screenshot of HE526 CTD data Page 8 of 8